



To check the oil level, stop the compressor and wait for 10 minutes or until the foaming has stopped.

Always keep the oil level 1 – 2 cm below the maximum level marking.

Do not top up before starting. The oil level will change from full to minimum during running caused by loading unloading, this is correct.

Never mix oil types!

If changing to different brands remember to flush through system and change oil filter after flushing with new oil.